

CUBICLE FITTING INSTUCTIONS

Thank you for purchasing cubicles from Condon Engineering Ltd.

- These instructions are to be used for fitting standard cantilever cubicles

Single row adjustable/ Head-Head Cubicles

NOTE: The posts (76mm) are set 250mm (10in) into the ground and 125mm (5in) from the wall. Ensure the edges of posts are positioned at least 150mm (6in) Left/Right from the edge of any proposed cubicle.

STEP 1A: Attach the bottom horizontal bar (60mm pipe) 250mm (10") from the floor to the wall side of the posts using 1no. post clamps and 2no. U-Bolts

STEP 1B: Attach the top horizontal bar (60mm pipe) 840mm (33") from the bottom horizontal bar to the posts using 1no. post clamps and 2no. U-Bolts

STEP 2: Connect the cubicles to the horizontal bars using 4no. single brackets and 4no. M12x90mm nuts and bolts

STEP 3A: Fix the headrail bar (48mm pipe) to the cubicles using 1no. headrail bracket per cubicle

STEP 3B: Fix the headrail ends to the end walls using 2no. M12 x 80mm through bolts.

STEP 4: Connect the headrail bar to headrail ends.

